


All sitting heights measured without load - a variation may occur depending on the load due to contraction of gas-struts, springs, upholstery and third part equipment. All information herein contained is subject to change without notice unless under contractual configuration control. Please consult Norsap if dimensions are critical or a certified drawing is required.

www.norsap.no

Chair interface:

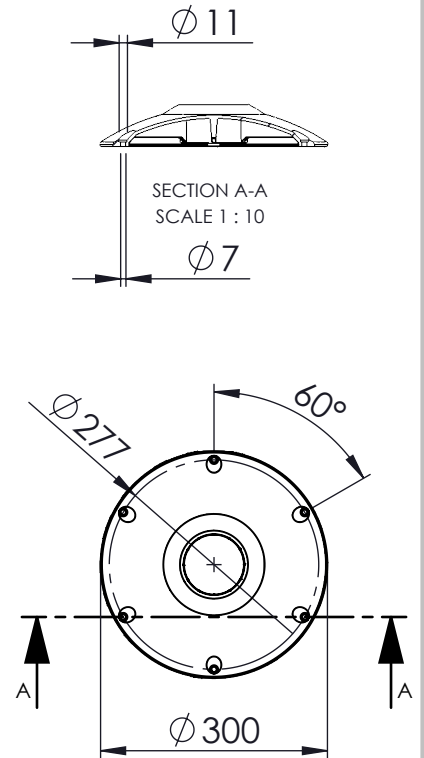

Weight: 30.00



Mjävannsvegen 45/47  
NO 4626 Kristiansand (Norway)

Description:  
**NS800 MANUAL**

Art.-No.:  
6100

Date:  
22.09.2020

Revision:  
A 7